WARNING


BE CAREFUL WHEN
USING SUCTION HOSE
IN FOL-DA-TANK.

EDGE OF COUPLING
COULD CUT
BOTTOM OF TANK.

FOL-DA-TANK COMPANY

P.O. BOX 110 - MILAN, IL 61264-0110

FOL~DA~TANK

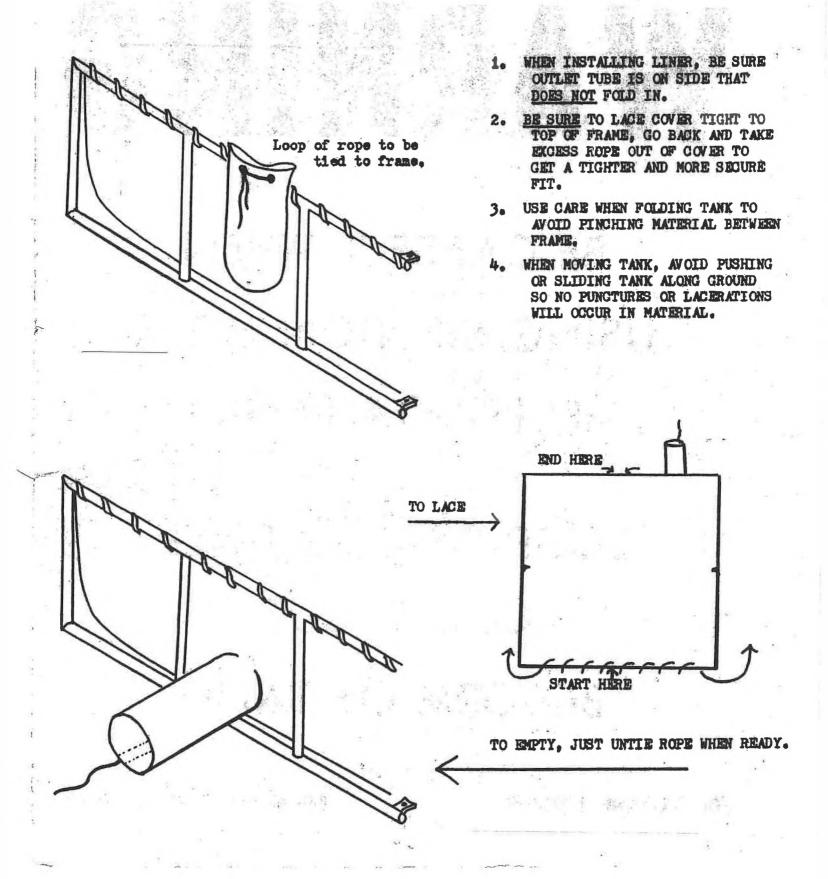

SUPPLY LINE HOLDERS

WARNING!

USE ALL SAFETY PINS AND LOCKING CLAMPS.

HOLDER IS UNDER PRESSURE!

TESTED TO 50 PSI

RECOMMENDED SAFE OPERATING FLOW RATE IS 20 PSI.

FOL-DA-TANK CO. 800-637-8265

GENERAL CARE AND MAINTENANCE

- 1. UNFOLDING TANK ON SITE: DURING EMERGENCIES TRY TO FIND THE MOST LEVEL AREA. IF POSSIBLE, CLEAN AREA OF DEBRIS AND USE A TARP OR FOL-DA-TANK GROUND COVER.
- 2. WHEN UNFOLDING, WATCH THE BREAK AWAY HINGES! CAUTION LABEL STATES (CAN PINCH HANDS!)
- 3. WHEN PLACING HARD SUCTION HOSE IN THE TANK WITH NO STRAINER THE THREADS COULD CUT THE LINER. USE FOL-DA-TANK LOW-FLOW STRAINER TO MAXIMIZE WATER USAGE AND PREVENT LINER DAMAGE.
- 4. WHEN THE FIRE IS OVER AND YOU ARE DONE DRAINING THE TANK, BEGIN TO FOLD THE TANK. MAKE SURE THE LINER FLOOR IS PULLED AWAY FORM THE FOLDING HINGES.
- 5. NORMAL STORAGE OPERATIONS ON THE TANKER. THERE ARE TWO WAYS THE FOL-DATANK CAN BE STORED. A.) RIGHT SIDE UP OR B.) UPSIDE DOWN TO ALLOW ANY WATER TO DRAIN OUT.
- 6. FIREHOUSE MAINTENANCE: THE LINER CAN BE CLEANED WITH ANY HOUSEHOLD FLOOR CLEANER (E.G. MR. CLEAN OR PINESOL)
- 7. ALLOW THE TANK TO DRY BEFORE STORING. THE TANK CAN BE PUT AWAY WET. MATERIAL IS MILDEW RESISTANT. AT THIS TIME YOU CAN INSPECT THE TANK FOR ANY PINHOLES.
- 8. TO REPAIR THE LINER USE A FOL-DA-TANK REPAIR KIT. FOLLOW REPAIR INSTRUCTIONS.